

1. Connect your recorders LAN port to your network
2. Move cursor to the right side of the screen and select Setup
3. Put in your 'User' and 'Password'
4. Select 'Device' and then 'Network'



5.

6. Change 'Type' to 'DHCP'
  - a. Note: If DHCP is already select and 'IP Address' is 0.0.0.0, change type to 'Static' and then back to 'DHCP'

7.

8. 'IP Address' is the address of our recorder
9. Log into your router and port forward the following ports – 80, 5920 & 5921, using the IP address from above
10. The IP address for your router is normally the 'IPv4 Default Gateway'
11. If you cannot log-in to our router or cannot find the port forwarding section check the manual on your router or check with your ISP (Internet Service Provider)